

## PARTS & ACCESSORIES

- 1 Single Tank Scale Frame (1 Frame)  
Dual Tank Scale Frame (2 Frames)
- 2 Replacement Roller & Pin
- 3 Load Cell with 12' Hose & Disconnect


- 1a Platform Mounting Feet  
1-Tank Scale (2 Feet)  
2-Tank Scale (4 Feet)

- 8 RS-5 Reed Switch with Reset Relay Box
- 9 PS-10 Fixed Pressure Switch
- 10 MA-420 Transmitter (24 Volt)  
Power Supply (110 Volt)
- 11 Hold Down Chains or  
Polyester Straps
- 12 Circular Chart Recorder  
1 or 7-day, Windup or Electric

- 4 Internal Load Cell Diaphragm
- 5 Hydraulic Hose (per foot)  
PVC Copper Tubing (per foot)
- 6 Quick Disconnect (female)  
Quick Disconnect (male)
- 7 Dials: 6" diameter Dial  
8-1/2" diameter Dial  
12" diameter Dial  
18" diameter Dial

CONSULT FACTORY  
FOR CURRENT PRICES

1-800-893-6723 or  
info@forceflow.com

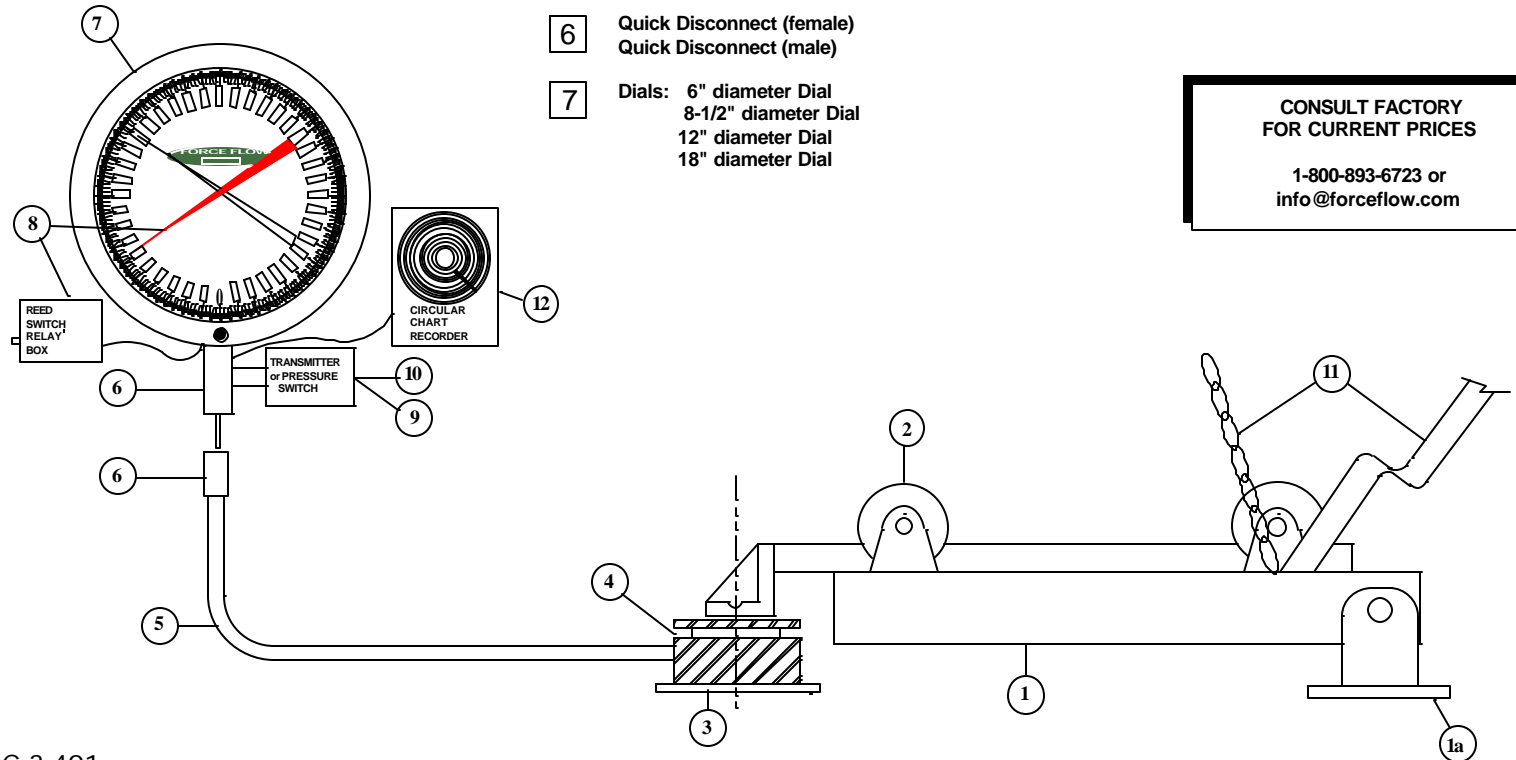

C.3.401



1150-D Burnett Ave, Concord, CA 94520 USA  
1-800-893-6723 US & Canada, Fax: 925-686-6713  
www.forceflow.com / info@forceflow.com

HYDRAULIC TON CONTAINER SCALE  
with CENTURY DIAL INDICATOR  
PARTS LIST

Drawn by: SLP  
Date: 01/05/89  
Revised: 03/20/01  
Scale: NONE

Drawing Number  
**29502-  
TON**