
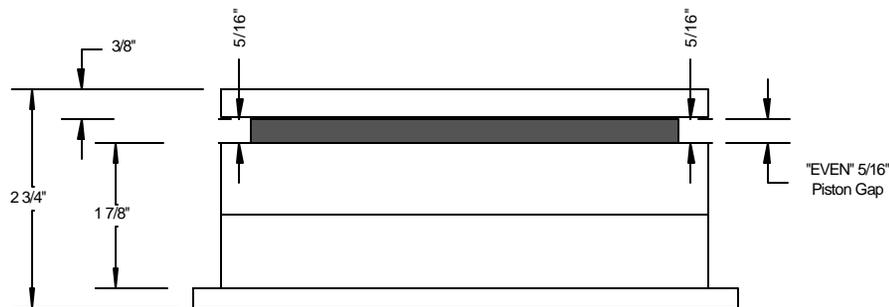



*Inaccurate readings may be caused by a loss of oil in the load cell.
Top off load cell by adding oil at filler plug.*

*Load Cell Gap should be even when under load.
If not, use washers under load cell mounting plate if uneven gap.*

**NOTE: Use SAE-5 OR -10 Weight
Non-Detergent, Light Weight Machine Oil**

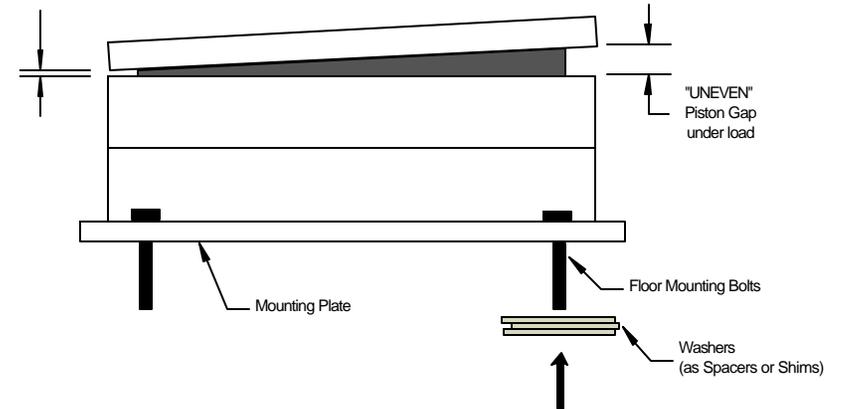

CORRECT PISTON GAP

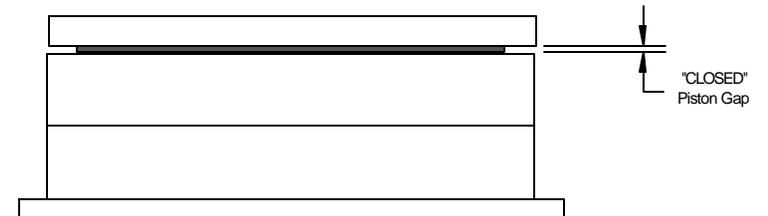

INCORRECT PISTON GAP

C.3.305



1150-D Burnett Ave, Concord, CA 94520 USA
1-800-893-6723 US & Canada, Fax: 925-686-6713
www.forceflow.com / info@forceflow.com

File: T4VACENMSTR/LC1256.tcw (A01.pdf) (WEB: A01.pdf)

**CORRECT INSTALLATION
HYDRAULIC LOAD CELL
(Load Cell Model LC1256)**

Drawn by: SLP
Date: 12/15/79
Revised: 10/26/98
Scale: 6" = 1' 2"

Drawing Number
29521